



FITMENT INSTRUCTIONS

ISUZU 2020 Canopy Camper and ModCAP Camper
Double Cab and Extra Cab

Installation Instructions

Preliminary information

Installation and fitment instructions includes the tools required, fasteners included in the kit, and the hardware included in the kit.

Please follow the instructions and check installation steps with the images in this document.

Alu-Cab recommends that all sealing work is allowed to cure for 24 hours, after which you may drive the vehicle on normal paved roads. Before driving off-road with your Alu-Cab product or operating your roof conversion, an additional cure period of 48 hours is required.

Failure to follow these instructions will void your warranty. Please ensure that you follow the sealant manufacturers curing time as per their technical data sheet.

These times may differ slightly from the times we have recommended.



Service Enquiries email
queries@alu-cab.com

DISCLAIMER

Safety Notice – Lifting and Handling of Product


Do not attempt to lift, move, or suspend the canopy, canopy camper, or any related product using eyebolts, eye nuts, or any components attached to the cargo rails or roof accessory tracks.

These points are not engineered or rated for lifting loads and may result in serious injury, product damage, or failure if used.

For all lifting and handling operations, only use approved lifting methods such as:

- A forklift positioned securely beneath the base structure, or
- Outrigging poles attached to the designated lifting brackets supplied or approved by Alu-Cab.

Always ensure lifting equipment and methods comply with applicable safety standards. Improper lifting may void the warranty on this product.

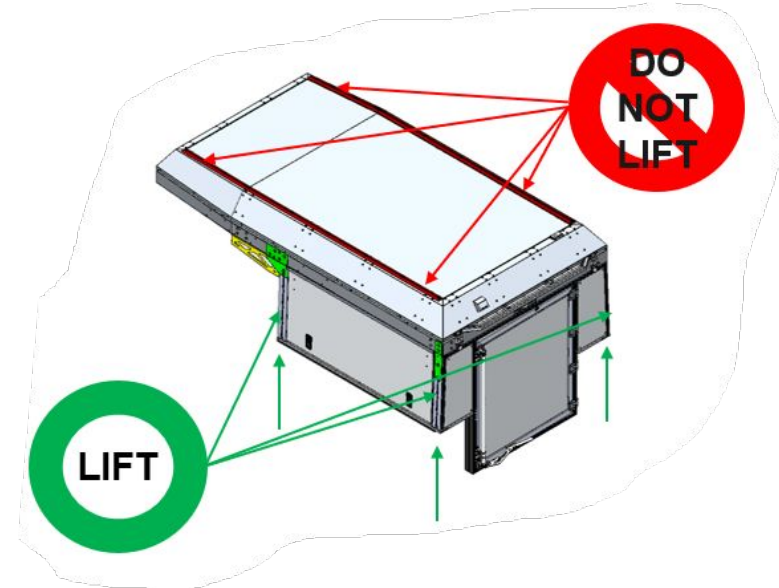

Service Enquiries email
queries@alu-cab.com

Installation Instructions

1.

Rear filler panel assembly.




ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	162-IZ20-RER-BOT-COV-PLT-01	REAR BOTTOM COVER PLATE	1
2	162-IZ20-INNER-BOX-LH-01	INNER BOX LH	1
3	162-IZ20-INNER-BOX-RH-01	INNER BOX RH	1
4	162-IZ20-SHD-RER-LH-01	ISUZU CC REAR LIGHT SHIELD LH	1
5	162-IZ20-SHD-RER-RH-01	ISUZU CC REAR LIGHT SHIELD RH	1
6	CAGE-M6	M6 CAGE NUT	10
7	BHD-M6x16	M6x16 B/HD BOLT S/S	10
8	SW-M8	M8 SPRING WASHER S/S	5
9	FW-M6	M6x12mm FLAT WASHER S/S - DIN 125	10
10	SW-M6	M6 SPRING WASHER S/S	10
11	FFW-M8	M8x20mm OVERSIZED WASHER S/S - DIN 9021	5
12	BHD-M8x16	M8x16 B/HD BOLT S/S	5
13	NUT-M8	M8 HEX NUT S/S	5
14	HEX-M8x20	M8x20 HEX BOLT S/S	8
15	NCAP-M8	NUT CAP-08mm	8
16	NY-M8	M8 NYLOC NUT S/S	8
17	FW-M8	M8x16mm FLAT WASHER S/S - DIN 125	8
18	SPNG-RUB-325 - (454.5mm)	SPONGE RUBBER - 3X25mm	4
19	HEX-M10X30-1.25P	M10X30 HEX BOLT S/S - 1.25 PITCH	2
20	FFW-M10	M10x30mm OVERSIZED WASHER S/S - DIN 9021	2
21	SW-M10	M10 SPRING WASHER S/S	2
22	RUB-MDS - (0.48m)	MIDGET DOOR SEAL 480mm	2
23	RUB-P - (0.5m)		2

Installation Instructions

1.2

Fit lower door frame to filler panel assembly as shown.

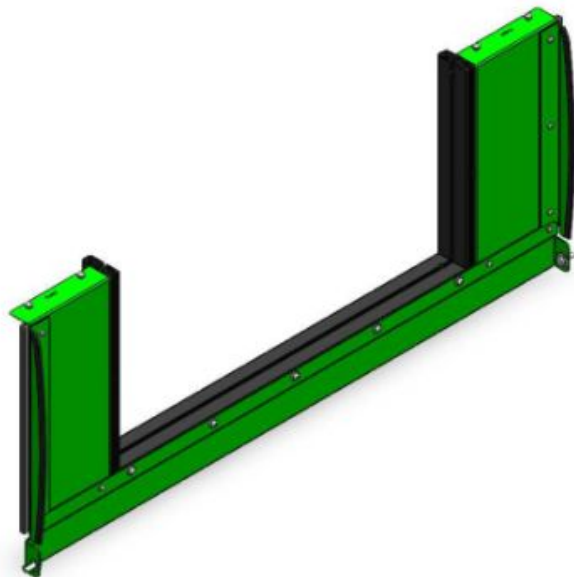

Installation Instructions

2.


Rear bottom support bracket.



Installation Instructions

3.


Mount filler panel assembly to load bin as shown.

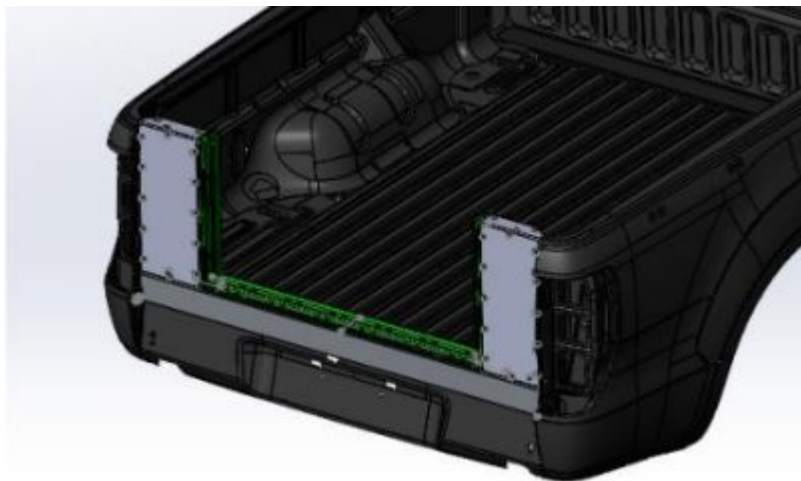

Installation Instructions

4.

Then mount canopy camper base unit on top of load bin.

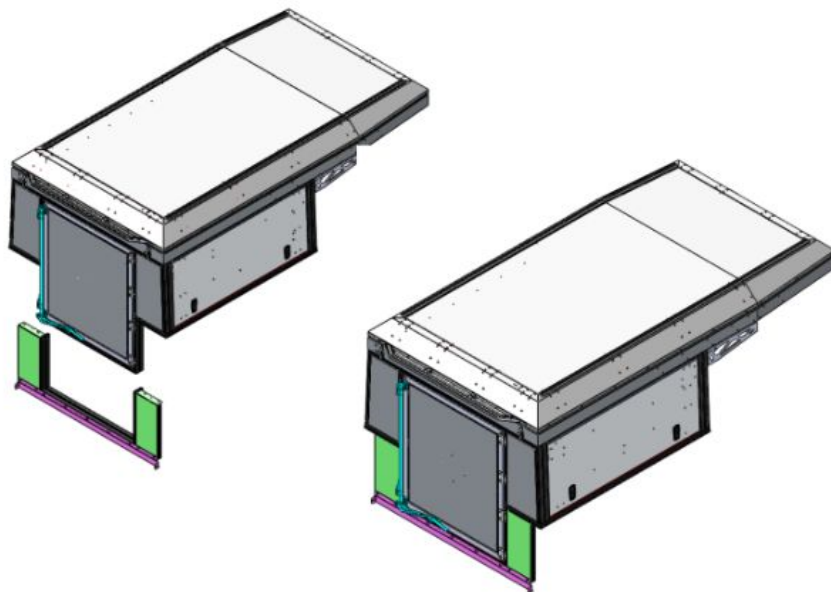


Installation Instructions

5.1

Connect rear filler panel assembly and base unit as shown.



OUTER MOUNTING ON BOTH JOINTS

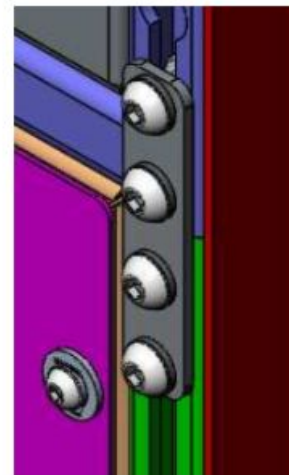

Installation Instructions

5.2



INNER MOUNTING ON BOTH JOINTS

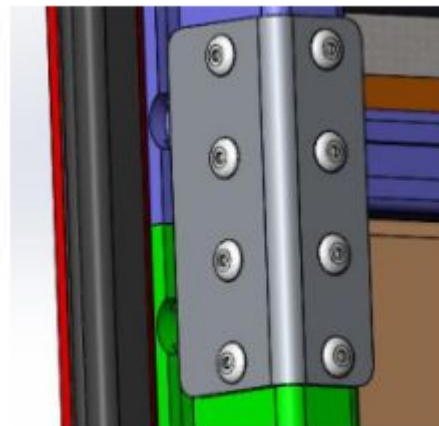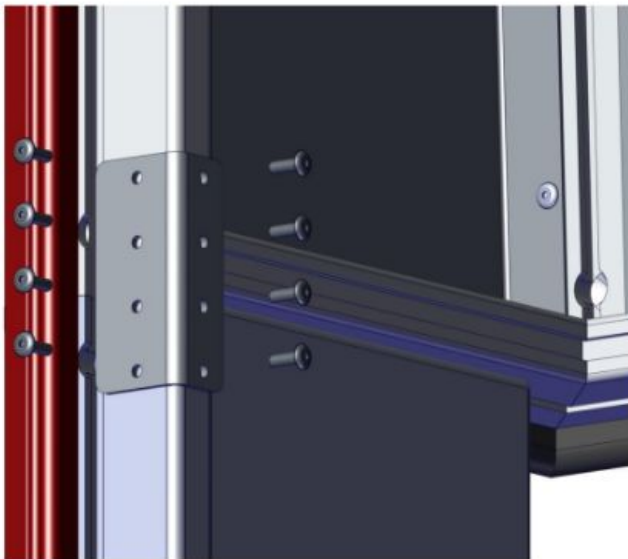

Installation Instructions

6.


Fit rear door rebate with Ø4.8 x 15 sealed counter sink rivets as shown.

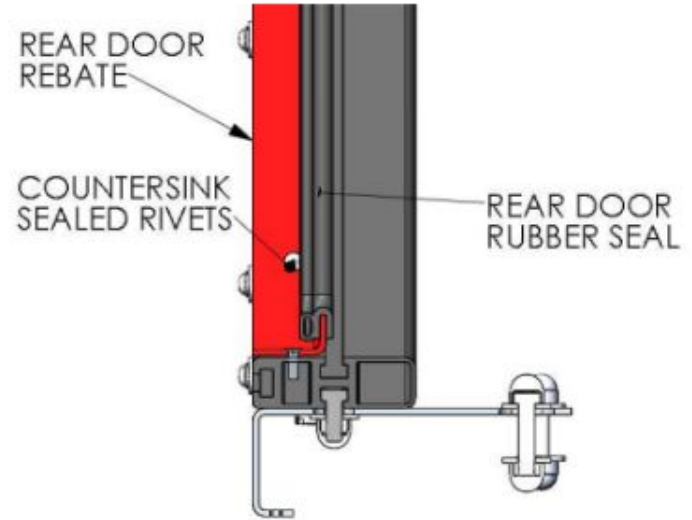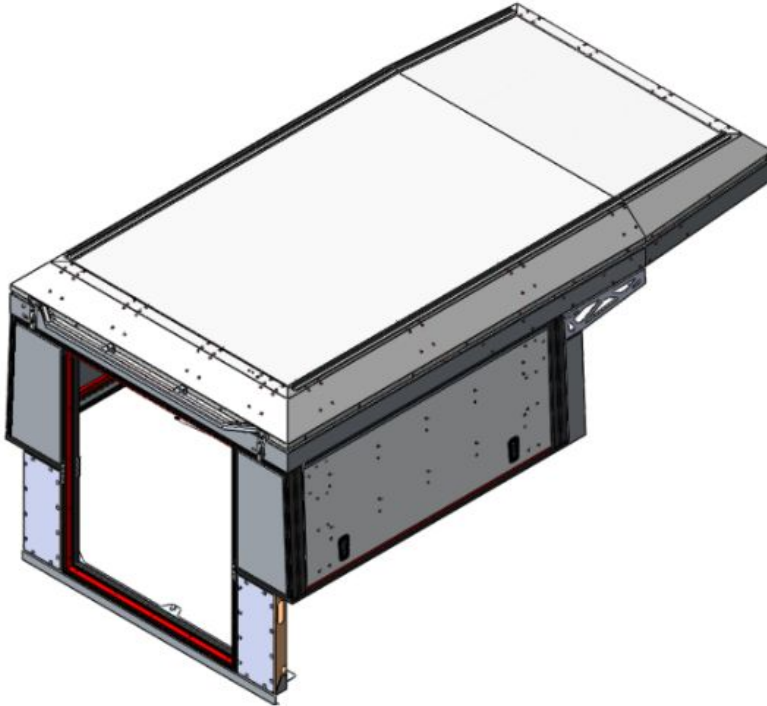

Installation Instructions

7.


Fit rear door by mounting 4 x Butt hinges to camper frame as shown. Centre rear door, top to bottom and the hinge centres left to right. Also mount the door lock to the camper frame.

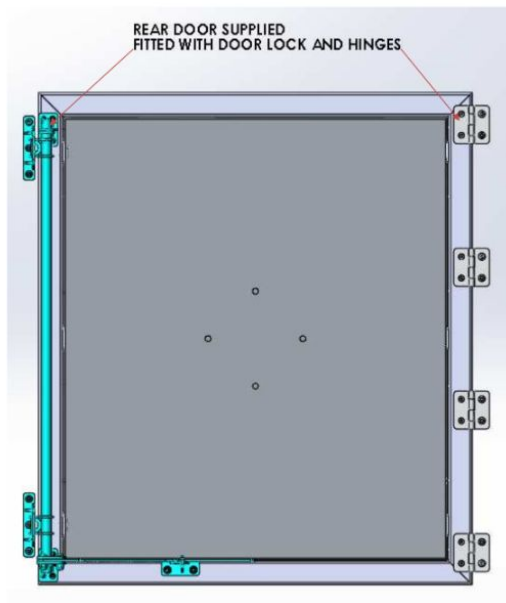

Installation Instructions

8.

Attach hinges and lock to camper frame.

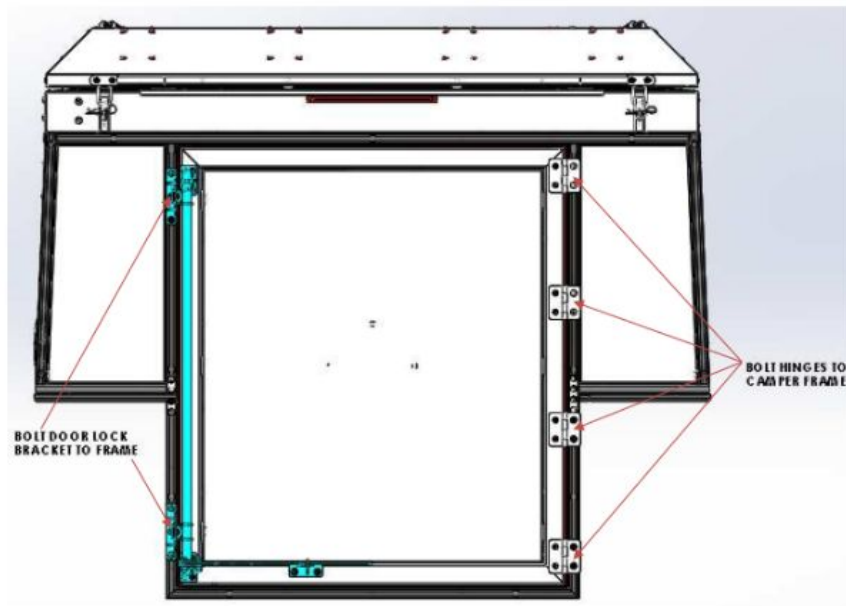

Installation Instructions

Canopy Camper Fitment – Tools, Fasteners & Materials

1.1

Tools Required:

<u>TOOL</u>
• Ratchet
• T-40 Spline Socket
• 13mm Socket
• 13mm Ring Flat Spanner

Installation Instructions

2. Canopy Camper Fitment Mounting Brackets

2.1 Center Mount Brackets



ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	CMB-000-002	BOTTOM MOUNT BRACKET	2
2	162-REVO-CNT-MNT-ANG-01	CENTRE MOUNTING ANGLE	2
3	FW-M8	M8x16mm FLAT WASHER S/S - DIN 125	6
4	NY-M8	M8 NYLOC NUT S/S	6
5	HEX-M8x25	M8x25 HEX BOLT S/S	2
6	FFW-M8	M8x20mm OVERSIZED WASHER S/S - DIN 9021	2
7	HEX-M8x20	M8x20 HEX BOLT S/S	4
8	NCAP-M8	NUT CAP-08mm	6

Installation Instructions

2.2


Front mounting brackets LH & RH Assemblies

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
LEFT HAND FRONT MOUNTING KIT			
1	NCAP-M8	NUT CAP-08mm	6
2	FFW-M8	M8x20mm OVERSIZED WASHER S/S - DIN 9021	7
3	HEX-M8x30	M8x30 HEX BOLT S/S	3
4	SW-M8	M8 SPRING WASHER S/S	3
5	162-CC-IZ20-FNT-MNT-LH-BRKT-01	FRONT MOUNTING LH BRACKET	1
6	403-BOT-MNT-BRKT-01	BOTTOM MOUNTING BRACKET	1
7	HEX-M8x35	M8x35 HEX BOLT S/S	1
8	HEX-M8x20	M8x20 HEX BOLT S/S	2
9	NY-M8	M8 NYLOC NUT S/S	3
10	AC001-STD-SHIM-02	SHIM PLATE 2	6
11	162-CC-IZ20XC-FNT-MNT-BRKT-LH-01	ISUZU 2020 XC FRONT MOUNT BRACKET LH	1
12	293-IZ20-FNT-SHIM-01	FRONT SHIM	3
RIGHT HAND FRONT MOUNTING KIT			
1	NCAP-M8	NUT CAP-08mm	7
2	SW-M8	M8 SPRING WASHER S/S	2
3	FFW-M8	M8x20mm OVERSIZED WASHER S/S - DIN 9021	7
4	HEX-M8x30	M8x30 HEX BOLT S/S	3
5	162-CC-IZ20-FNT-MNT-RH-BRKT-01	FRONT MOUNTING BRACKET RH	1
6	403-BOT-MNT-BRKT-01	BOTTOM MOUNTING BRACKET	1
7	HEX-M8x35	M8x35 HEX BOLT S/S	1
8	HEX-M8x20	M8x20 HEX BOLT S/S	2
9	NY-M8	M8 NYLOC NUT S/S	3
10	AC001-STD-SHIM-02	SHIM PLATE 2	6
11	162-CC-IZ20XC-FNT-MNT-BRKT-RH-01	ISUZU 2020 XC FRONT MOUNT BRACKET RH	1
12	293-IZ20-FNT-SHIM-01	FRONT SHIM	3

Installation Instructions


2.2.1

Note: The Kit is suitable for an Extra-Cab as well as a Double-Cab, the Extra cab brackets are marked as XC, the Double-Cab brackets are the front brackets that are not marked. When using the XC brackets ensure to use the spacers in the back to correct the recessed forming in the load bin.

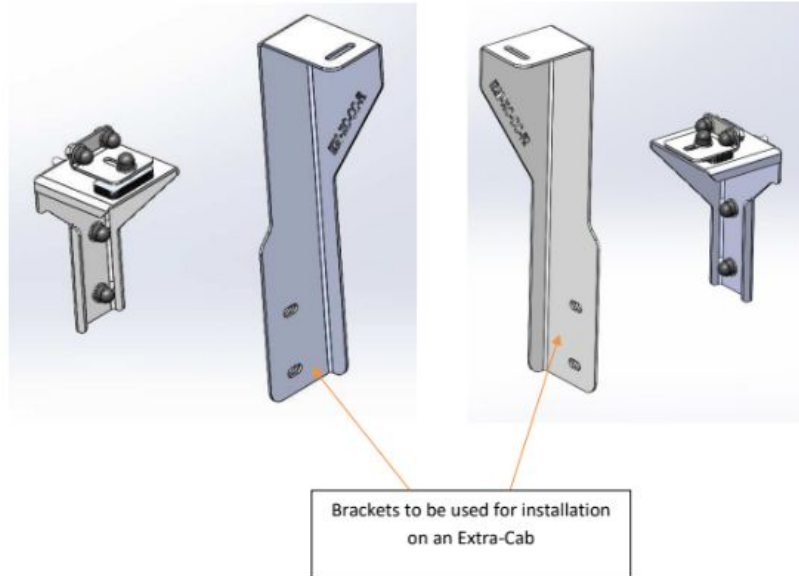

2.2.2

The fastening hardware is suitable to be used on both kits, when using the XC kit the same top mounting brackets are usable.

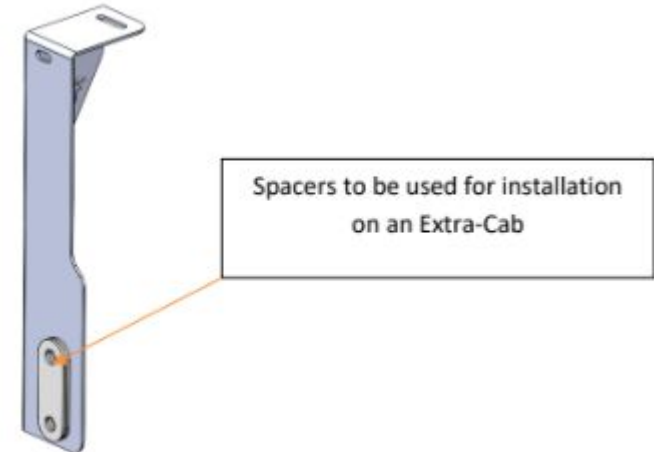

Installation Instructions

2.3

Rear mounting brackets LH & RH Assemblies





ITEM NO.	PART NUMBER	DESCRIPTION	QTY
LEFT HAND REAR MOUNT			
1	HEX-M8x30	M8x30 HEX BOLT S/S	3
2	SW-M8	M8 SPRING WASHER S/S	3
3	FFW-M8	M8x20mm OVERSIZED WASHER S/S - DIN 9021	7
4	NCAP-M8	NUT CAP-08mm	6
5	HEX-M8x35	M8x35 HEX BOLT S/S	1
6	162-CC-IZ20-LH-RER-MNT-BRKT-01	REAR MOUNT BRKT LH	1
7	403-BOT-MNT-BRKT-01	BOTTOM MOUNTING BRACKET	1
8	162-JPGLAD-BUSH-01	NYLON SPACER BUSH	1
9	HEX-M8x20	M8x20 HEX BOLT S/S	2
10	NY-M8	M8 NYLOC NUT S/S	3
11	AC001-STD-SHIM-02	SHIM PLATE 2	6
RIGHT HAND REAR MOUNT			
1	FFW-M8	M8x20mm OVERSIZED WASHER S/S - DIN 9021	7
2	SW-M8	M8 SPRING WASHER S/S	3
3	HEX-M8x30	M8x30 HEX BOLT S/S	3
4	NCAP-M8	NUT CAP-08mm	6
5	162-CC-IZ20-RH-RER-MNT-BRKT-01	REAR MOUNT BRKT RH	1
6	403-BOT-MNT-BRKT-01	BOTTOM MOUNTING BRACKET	1
7	162-JPGLAD-BUSH-01	NYLON SPACER BUSH	1
8	HEX-M8x20	M8x20 HEX BOLT S/S	2
9	AC001-STD-SHIM-02	SHIM PLATE 2	6
10	HEX-M8x35	M8x35 HEX BOLT S/S	1
11	NY-M8	M8 NYLOC NUT S/S	3

Installation Instructions

3.

Images showing front mounting position of mounting brackets in load bin.

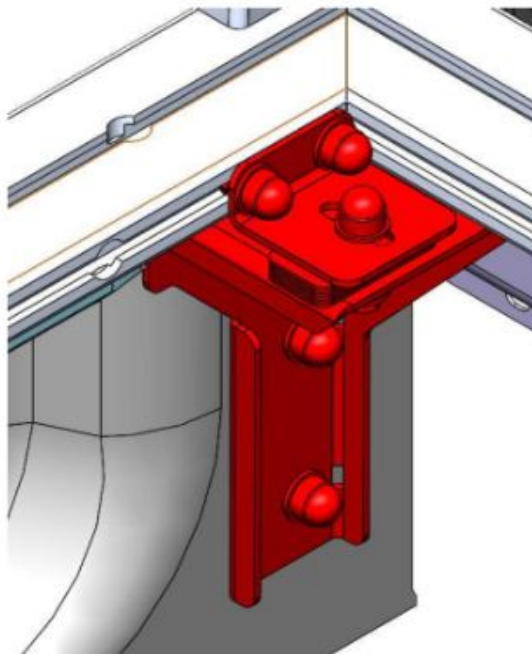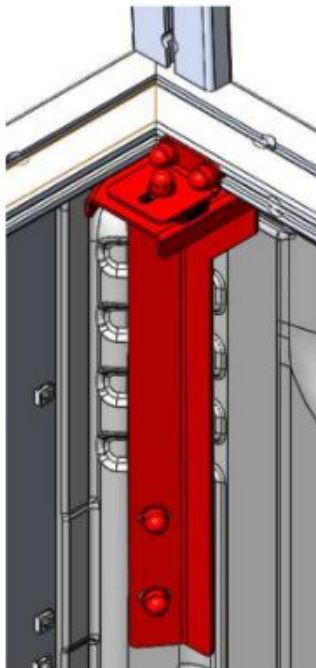

Disclaimer

All rights reserved. No part of this website may be reproduced, translated, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of the owner.

Review all instructions information carefully before installation.

Any damages, direct or incidental to the installer and/or property due to incorrect installation of any parts are the responsibility of the installer. Due to the various applications and fitment options available, the responsibility lies with the user to ensure all mounting points are secure and tight before every trip.

If unsure, consult with your Distributor regarding the operations of our products.

Users are advised to be mindful of the load they are carrying and drive in accordance with road conditions.

WARNING

Always wear appropriate PPE (Personal protection equipment) when fitting our products. Although the mounting kit is designed to be DIY, if you have any doubts or concerns, contact an accredited fitment centre to carry out the work. Alu-Cab will not be liable for any injury to persons, and/or damage to products and/or vehicles.

While Alu-Cab Holdings takes reasonable measures to ensure that the contents of this Website are accurate and complete, Alu-Cab Holdings makes no representations or warranties, whether express or implied, as to the quality, timeliness, operation, integrity, availability or functionality of this Website or as to the accuracy, completeness or reliability of any information on this Website. Alu-Cab Holdings reserves the right to make changes, corrections and/or improvements to the information and to the products and programs described in such information, at any time without notice.

Alu-Cab Holdings will use reasonable endeavours to maintain the availability of the Website, except during scheduled maintenance periods, and reserves the right to discontinue providing the Website or the service or any part thereof with or without notice to you. Any person who accesses this Website or relies on this Website or on the information contained in this Website does so at his or her own risk.

Occasionally, at our discretion, we may include or offer third-party products or services on our website. These third-party sites have separate and independent privacy policies. We therefore have no responsibility or liability for the content and activities of these linked sites. Nonetheless, we seek to protect the integrity of our site and welcome any feedback about these sites.