

Alu-CabTM OPERATING INSTRUCTIONS



ModCAP COMPACT CAMPER




OPENING



STEP ONE:

Unlatch both latches.

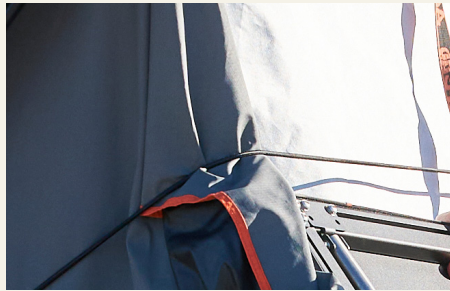

STEP TWO:

Lower the bungee cord to the base, positioning it within the nut slot opening on the front corners.




STEP THREE:

Pull the rear fold-out bed section towards the vehicle's rear.



STEP FOUR:

Fit the poles located at the bottom of the fold-out bed section into the side support brackets. Ensure the pin is in the unlocked position.

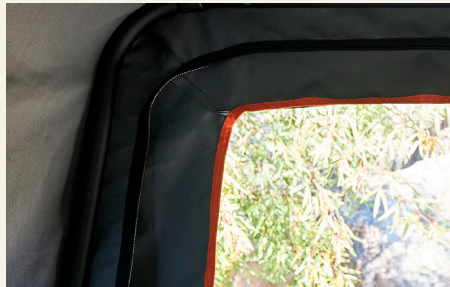

STEP FIVE:

Enter the camper and raise the canvas support arch into the upright position.



STEP SIX:

Attach the free ends of the poles to the canvas support arch.

Alu-CabTM

OPERATING INSTRUCTIONS



ModCAP COMPACT CAMPER



OPENING



STEP SEVEN:

Extend the support poles until the canvas is taut, then lock the telescopic pole cam.



STEP EIGHT:

Unclip the smaller bed sections situated under the main bed section.



STEP NINE:

Position the smaller bed sections between the two larger bed sections, ensuring the flange side faces the canvas.



STEP TEN:

Remove both mattresses from the storage bag and stack them on top of the bed frame.

Alu-CabTM OPERATING INSTRUCTIONS



ModCAP COMPACT CAMPER



CLOSING



STEP ONE:

Place both mattresses back into the mattress bag, then store or pack away.



STEP TWO:

Remove the smaller bed sections and store them underneath the larger bed section inside the camper.




STEP THREE:

Collapse the side canvas support poles and detach them from the canvas support arch.



STEP FOUR:

Lower the canvas support arch.

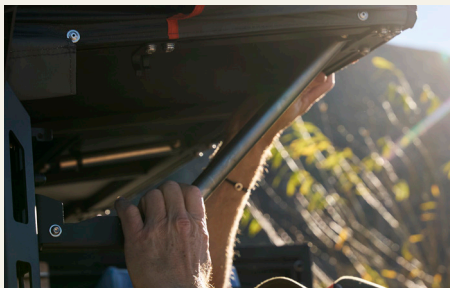

STEP FIVE:

Remove the poles from the bottom of the fold-out bed section from either side-support bracket.



STEP SIX:

Fold the fold-out bed section into the tent.



STEP SEVEN:

Return the bungee-cord to its original position.



STEP EIGHT:

Use the pull-down strap to lower the tent lid, ensuring the canvas is tucked in on all sides during the process.



STEP NINE:

Once the tent lid is fully closed and the canvas is secure, fasten both latches.

Alu-CabTM

CARE INSTRUCTIONS

PLEASE TAKE NOTE:

Avoid storing the tent while wet or damp.

Condensation forms after use – air and dry the tent promptly.

Tuck in the canvas on all sides when closing to prevent damage.

Only use approved roof racks or load bars.

Do not place items directly on roof panels – they may dent.

NOTE: Added weight requires more effort to open the tent (gas lifts provide partial assistance only)

Switch off lights and unplug electronics during transit / storage.