



FITMENT INSTRUCTIONS

mitsubishi triton L200 (XC) CANOPY FITMENT INSTRUCTION

Preliminary Information

Installation and fitment instructions including tools required, fasteners included in kit, and the hardware included in kit. Please follow the instructions and check installation actions with the images in this document.



Please be sure to lay out all parts provided on a table or flat surface in order to check that all required parts are accounted for and prevent potential frustration at a later stage.

Installation Instructions

1

Canopy Fitment – Tools, Fasteners & Materials The tables below show the equipment, i.e. tools and fasteners required to start the canopy fitment for a Mitsubishi Triton L200 Extra Cab. This fitment instruction is applicable to the Mitsubishi Triton L200 Extra Cab 2016+.

1.1

Tools & Items Required

TOOL
Ratchet
13mm Socket
13mm Ring Flat Spanner

1.2

Fasteners Supplied (included with canopy)

ITEM	QTY
M8x20mm Hex Bolt	16
M8x40mm Hex Bolt	8
M8 Flat Washer	40

ITEM	QTY
M8 Nyloc Nuts	24
M8 Plastic Nut Caps	32
M8 Hex Nuts	8

Please be sure to lay out all parts provided on a table or flat surface in order to check that all required parts are accounted for and prevent potential frustration at a later stage.

Installation Instructions

1

Canopy Fitment – Tools, Fasteners & Materials The tables below show the equipment, i.e. tools and fasteners required to start the canopy fitment for a Mitsubishi Triton L200 Extra Cab. This fitment instruction is applicable to the Mitsubishi Triton L200 Extra Cab 2016+.

1.3

Hardware Required

ITEM	QTY
Top Centre Mount Bracket	8
Bottom Centre Mount Bracket	8

Please be sure to lay out all parts provided on a table or flat surface in order to check that all required parts are accounted for and prevent potential frustration at a later stage.

1.4

Consumables Required

ITEM
Turpentine
Cloth
Black sealant, silicone or Sikaflex
Window Cleaner
Thread Lock (Loctite)

Installation Instructions

2

Canopy Support Brackets

In Figure 1 and Figure 2 below are the canopy support brackets for the Extra Cab Mitsubishi Triton L200.

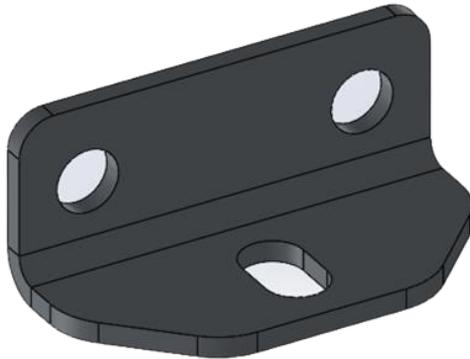


Fig 1. Top Centre Mount Bracket

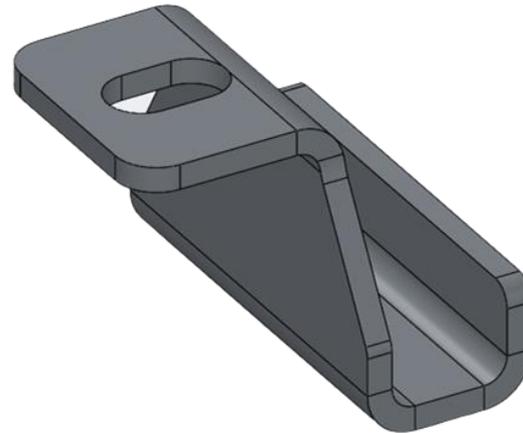


Fig 2. Bottom Centre Mount Bracket

Installation Instructions

2

Canopy Support Brackets

Figure 3 shows how the support brackets should be assembled. Note that the M8 x 20 bolts need to be fitted into the bottom nut slot on the canopy (16 each side) and then the bracket can be fully assembled

Part No.	Description	Qty
1	M8x16mm FLAT WASHER	40
2	M8 HEX NUT S/S	8
3	NCAP-o8mm	32
4	M8x40 HEX BOLT S/S	8
5	M8 NYLOC NUT S/S	24
6	M8x20 HEX BOLT S/S	16

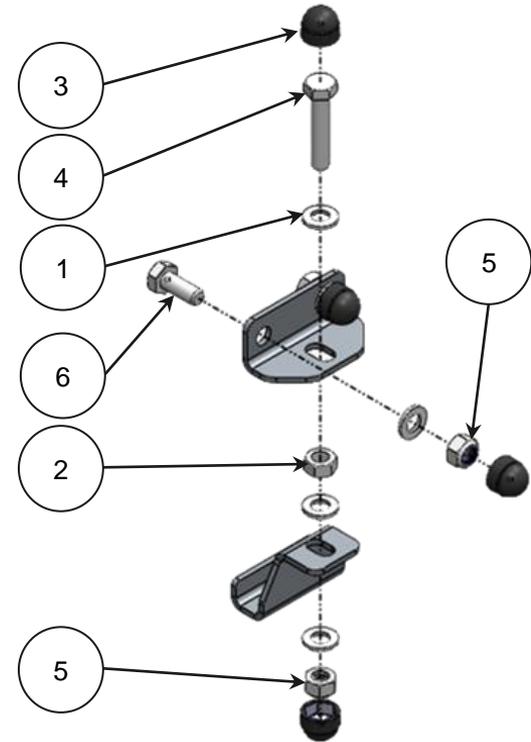


Fig 3. Assembled Centre Mount Bracket

Installation Instructions

3.1

Mounting the Centre Mounting Bracket

In Figure 4 and 5 below illustrates how the centre mounting bracket clamps onto the load bin.

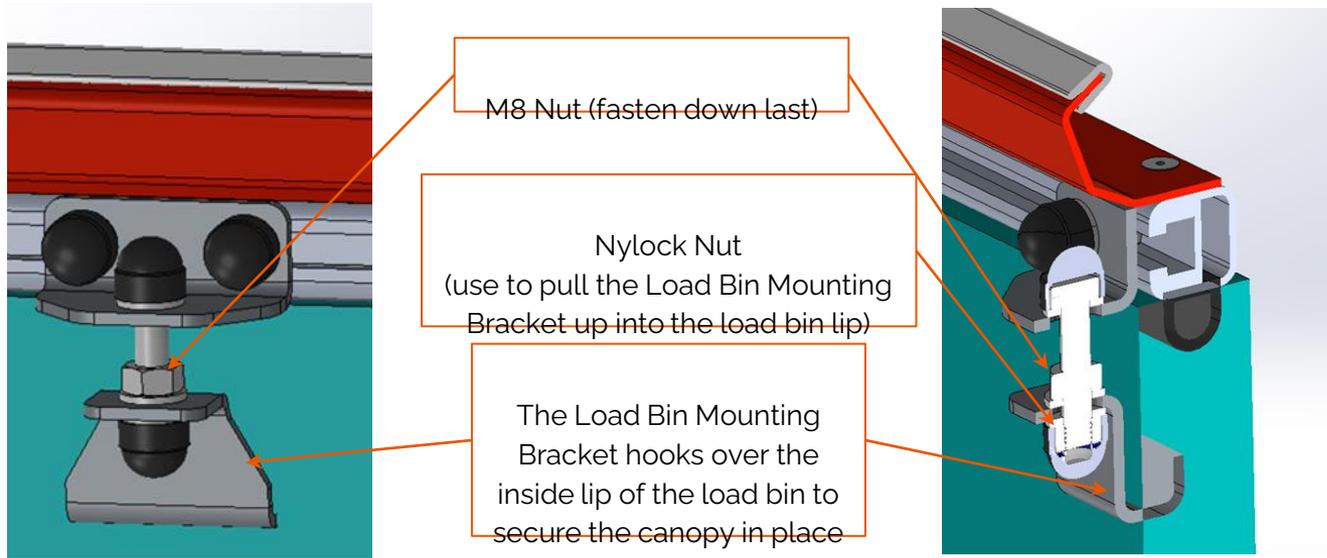


Fig 4. Load Bin Centre Bracket Cross-Section

Fig 5. Centre Bracket on Load Bin

Installation Instructions

4

Canopy Installation

Before placing the canopy onto the load bin, check that the D-Rubber is intact on the canopy. If this is not done, the canopy and/or load bin could be damaged or can cause leaks into the canopy.

To position the canopy, ensure that it is flush with the load bin as illustrated in Figure 6.

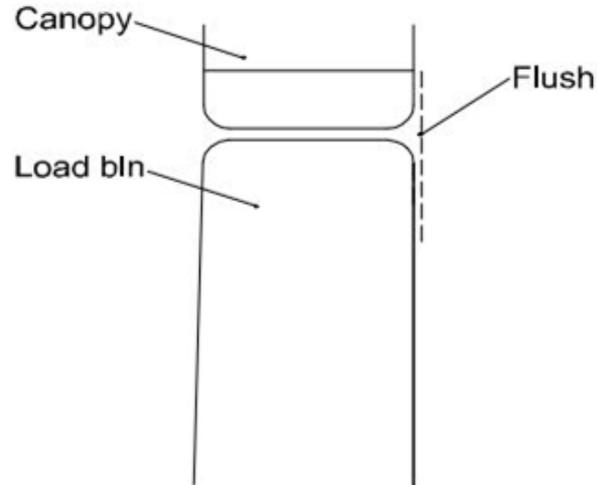


Fig 6. Load Bin and Canopy

Disclaimer

All rights reserved. No part of this website may be reproduced, translated, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of the owner.

Review all instructions information carefully before installation.

Any damages, direct or incidental to the installer and/or property due to incorrect installation of any parts are the responsibility of the installer. Due to the various applications and fitment options available, the responsibility lies with the user to ensure all mounting points are secure and tight before every trip.

If unsure, consult with your Distributor regarding the operations of our products.

Users are advised to be mindful of the load they are carrying and drive in accordance with road conditions.

WARNING

Always wear appropriate PPE (Personal protection equipment) when fitting our products. Although the mounting kit is designed to be DIY, if you have any doubts or concerns, contact an accredited fitment centre to carry out the work. Alu-Cab will not be liable for any injury to persons, and/or damage to products and/or vehicles.

While Alu-Cab Holdings takes reasonable measures to ensure that the contents of this Website are accurate and complete, Alu-Cab Holdings makes no representations or warranties, whether express or implied, as to the quality, timeliness, operation, integrity, availability or functionality of this Website or as to the accuracy, completeness or reliability of any information on this Website. Alu-Cab Holdings reserves the right to make changes, corrections and/or improvements to the information and to the products and programs described in such information, at any time without notice.

Alu-Cab Holdings will use reasonable endeavours to maintain the availability of the Website, except during scheduled maintenance periods, and reserves the right to discontinue providing the Website or the service or any part thereof with or without notice to you. Any person who accesses this Website or relies on this Website or on the information contained in this Website does so at his or her own risk.

Occasionally, at our discretion, we may include or offer third-party products or services on our website. These third-party sites have separate and independent privacy policies. We therefore have no responsibility or liability for the content and activities of these linked sites. Nonetheless, we seek to protect the integrity of our site and welcome any feedback about these sites.