

Alu-Cab™

MAKE IT BETTER

FITMENT INSTRUCTIONS

2m & 270°-Awning-To-K-9-Roof-Rack (LEFT AND RIGHT)

DISCLAIMER

Preliminary information

All rights reserved. No part of this document may be reproduced, translated, stored in a retrieval system. Or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of the owner.

Review all instruction information carefully before installation.

Any damages, direct or indirect to the installer and/or property due to incorrect installation of any parts are the responsibility of the installer. Due to the various

application and firmment options available, the responsibility lies with the user to ensure all mounting points are secure and tight before every trip. If unsure, consult with your Distributor regarding the operations of our products.

Users are advised to be mindful of the load they are carrying and drive in accordance with road conditions.



Service Enquiries email
queries@alu-cab.com

Installation Instructions

The tables below show the equipment, i.e. tools and fasteners required to install the **270° & 2m-Awning-To-K-9-Roof-Rack**

1.1

Tools & Items Required
Size 13 spanner
Or 13 Socket and Wrench

1.2

Hardware Required	Qty
AWN TO K9 FRONT MOUNT BRACKET	1
AWN TO K9 REAR LHS/RHS MOUNT BRACKET	1

1.3

Fasteners Supplied	Qty
M8x16mm FLAT WASHER	12
M8x20mm OVERSIZED WASHER	5
M8x20 HEX BOLT	6
M8x25 HEX BOLT	5
M8 NYLOC NUT	11
M8 NUT CAP	2


Please be sure to lay out all parts provided on a table or flat surface in order to check that all required parts are accounted for and prevent potential frustration at a later stage.

Installation Instructions

STEP
1

Install the rear bracket

Install the AWN TO K9 REAR LHS/RHS MOUNT BRACKET to the awning identifying which holes align. Use a knife or a punch to make these holes in the awning bag, and then secure the bracket to awning using the M8x20 bolts, washers and Nylock nuts. Only tighten the fasteners down finger tight.

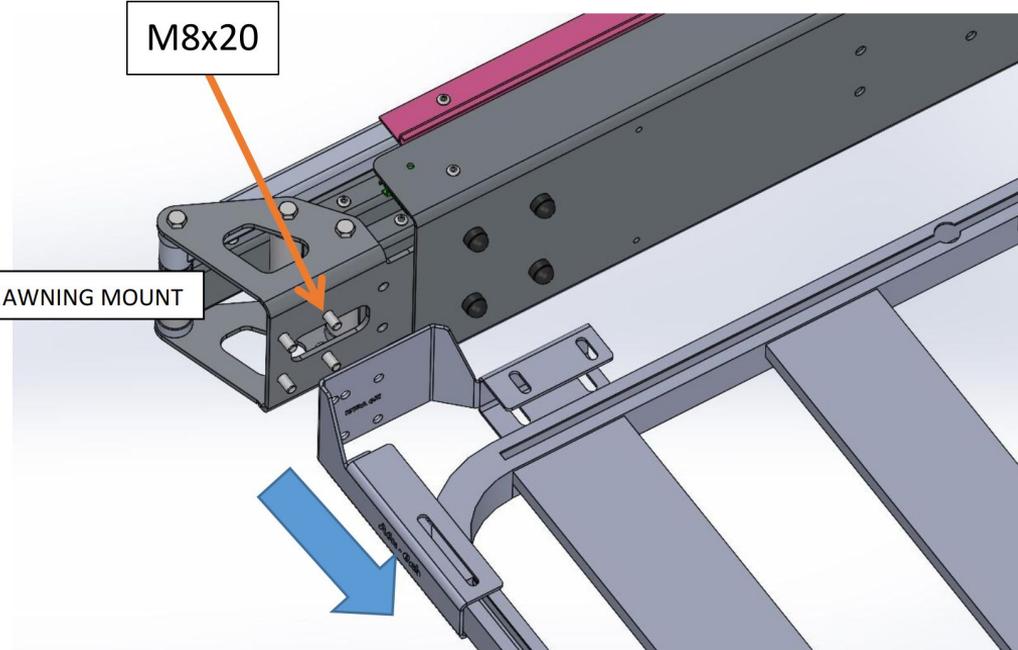


Installation Instructions

STEP
2

Install the front bracket

Install the AWN TO Kg FRONT MOUNT BRACKET to front side of the awning. Identify which holes align. Use a knife or a punch to make these holes in the awning bag, and then secure the bracket to awning using the M8x20 bolts, washers and Nylock nuts. Only tighten the fasteners down finger tight.

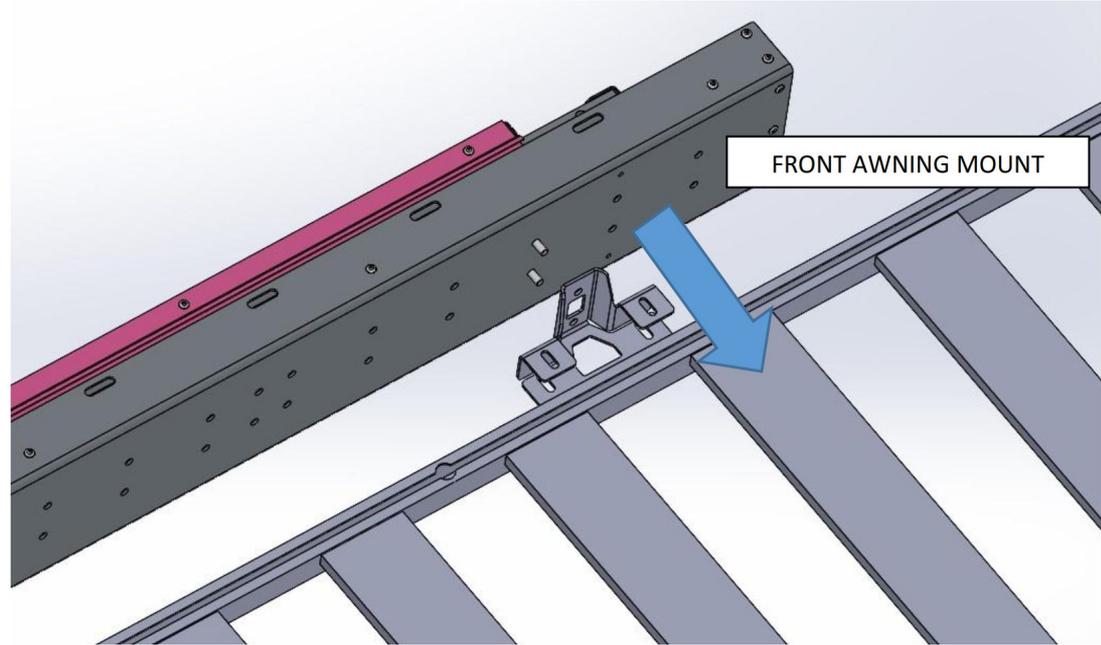

Installation Instructions

STEP
3

Test Fit on Kg Roof Rack

With the front and rear brackets fitted, slide the awning-bracket assembly on to the Kg Roof Rack. Secure the assembly temporarily in place using quick grips or G Clamps.

Test the awning by opening it. Ensure that the awning can fully open to 270°. If it clashes with the rear bracket. It will be necessary to switch the mounting holes, so that the awning sits further backward. The image on the right shows an awning mounted too far forward.





Installation Instructions

STEP
4

Fully Secure Front and Rear Mount Bracket to the Awning

With the position of the front and rear brackets confirmed, fully secure the brackets and add the plastic nut caps to the nylock nuts

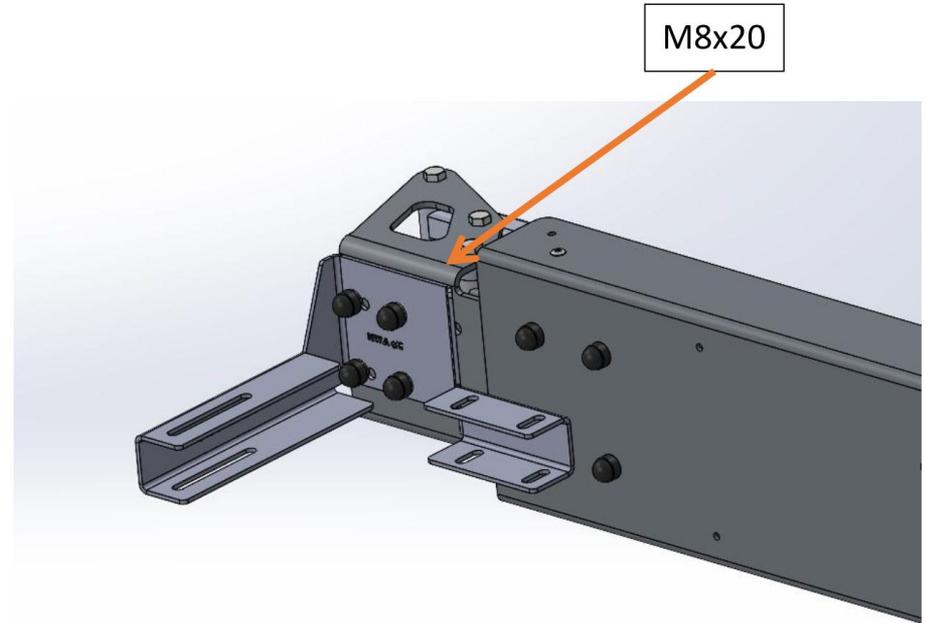
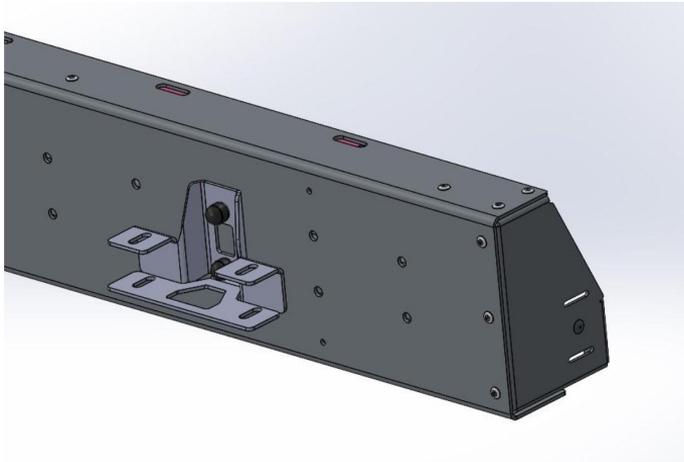


Installation Instructions

STEP
5

Secure the Awning to the K9 Roof Rack

Slide the supplied M8 Nuts through the K9 Roof Rack Nut Slot, to a position that will somewhat align with the awning brackets. Then slide the awning-bracket assembly over the roof rack. Secure and fasten the awning brackets to the K9 roof rack, using the supplied M8 fasteners

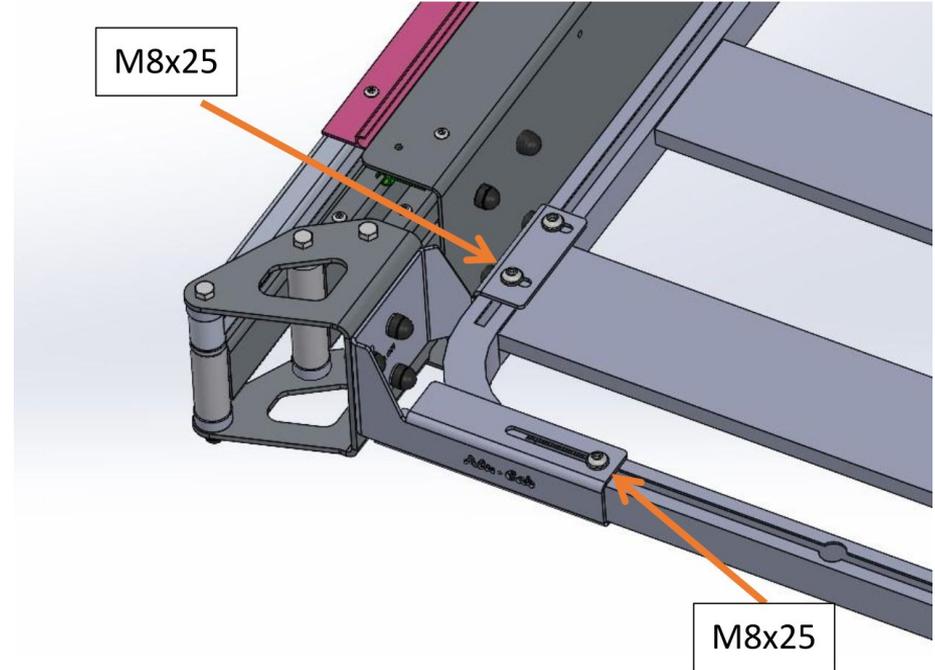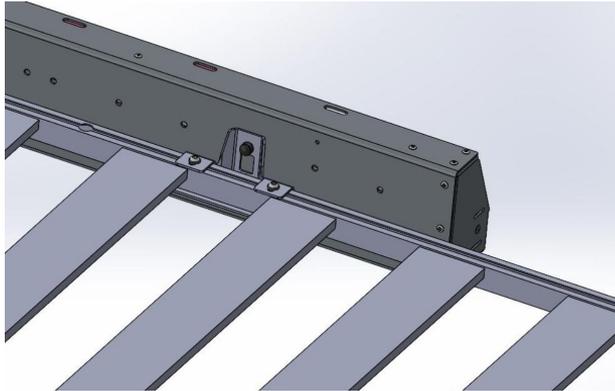

Disclaimer



All rights reserved. No part of this website may be reproduced, translated, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of the owner.

Review all instructions information carefully before installation.

Any damages, direct or incidental to the installer and/or property due to incorrect installation of any parts are the responsibility of the installer. Due to the various applications and fitment options available, the responsibility lies with the user to ensure all mounting points are secure and tight before every trip.

If unsure, consult with your Distributor regarding the operations of our products.

Users are advised to be mindful of the load they are carrying and drive in accordance with road conditions.

WARNING

Always wear appropriate PPE (Personal protection equipment) when fitting our products. Although the mounting kit is designed to be DIY, if you have any doubts or concerns, contact an accredited fitment centre to carry out the work. Alu-Cab will not be liable for any injury to persons, and/or damage to products and/or vehicles.

While Alu-Cab Holdings takes reasonable measures to ensure that the contents of this Website are accurate and complete, Alu-Cab Holdings makes no representations or warranties, whether express or implied, as to the quality, timeliness, operation, integrity, availability or functionality of this Website or as to the accuracy, completeness or reliability of any information on this Website. Alu-Cab Holdings reserves the right to make changes, corrections and/or improvements to the information and to the products and programs described in such information, at any time without notice.

Alu-Cab Holdings will use reasonable endeavours to maintain the availability of the Website, except during scheduled maintenance periods, and reserves the right to discontinue providing the Website or the service or any part thereof with or without notice to you. Any person who accesses this Website or relies on this Website or on the information contained in this Website does so at his or her own risk.

Occasionally, at our discretion, we may include or offer third-party products or services on our website. These third-party sites have separate and independent privacy policies. We therefore have no responsibility or liability for the content and activities of these linked sites. Nonetheless, we seek to protect the integrity of our site and welcome any feedback about these sites.