

# Alu-Cab<sup>TM</sup>

**MAKE IT BETTER**

---

## **FITMENT INSTRUCTIONS**

### **TOYOTA HILUX 2026 DC & XC CANOPY**

PN65D00145 | PN65D00146 | PN65D00147 | PN65D00148 | PN65D00149 | PN65D00150  
PN65D00151 | PN65D00152 | PN65D00154 | PN65D00155 | PN65D00156 | PN65D00157

# DISCLAIMER

## Preliminary information

All rights reserved. No part of this document may be reproduced, translated, stored in a retrieval system. Or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of the owner.

Review all instruction information carefully before installation.

Any damages, direct or indirect to the installer and/or property due to incorrect installation of any parts are the responsibility of the installer.

Due to the various application and fitment options available, the responsibility lies with the user to ensure all mounting points are secure and tight before every trip. If unsure, consult with your Distributor regarding the operations of our products.

Users are advised to be mindful of the load they are carrying and drive in accordance with road conditions.



Service Enquiries email  
[queries@alu-cab.com](mailto:queries@alu-cab.com)

# Installation Instructions

The table below shows the equipment, i.e. tools required to install the **TOYOTA HILUX 2026 CANOPY**

| Tools & Items Required     |
|----------------------------|
| Cordless Electric Drill    |
| Rivnut Insert Tool for M8  |
| 8mm & 11mm Steel Drill Bit |
| Centre Punch               |
| Hammer                     |
| Torque Wrench ¼" Drive     |
| 13mm Hex ¼" Socket         |
| 13mm Ratchet Spanner       |
| 5mm Allen Key ¼" Socket    |
| 4mm Allen Key ¼" Socket    |
| Corrosion Prevention Spray |
| Measuring Tape             |



# Installation Instructions

The table below shows the Mounting Kit, i.e. fasteners and brackets required to install the **TOYOTA HILUX 2026 CANOPY**

| Mounting Kit Brackets & Fasteners       | Quantity |
|-----------------------------------------|----------|
| MOUNTING BRACKET A                      | 2        |
| MOUNTING BRACKET B                      | 2        |
| MOUNTING BRACKET C                      | 6        |
| MOUNTING BRACKET FRONT RHS              | 1        |
| MOUNTING BRACKET FRONT LHS              | 1        |
| MOUNTING BRACKET REAR RHS               | 1        |
| MOUNTING BRACKET REAR LHS               | 1        |
| MOUNTING BRACKET REAR SHIM              | 2        |
| BACKING PLATE                           | 8        |
| SHIM PLATE                              | 32       |
| M8X25 HEX BOLT S/S                      | 24       |
| M8X20 HEX BOLT S/S                      | 16       |
| M8X25 CUP SQ BOLT S/S                   | 16       |
| M8X20MM OVERSIZED WASHER S/S - DIN 9021 | 16       |
| M8X16MM FLAT WASHER S/S - DIN 125       | 40       |
| M8 SPRING WASHER S/S                    | 24       |
| M8 NYLOC NUT S/S                        | 32       |
| M8 CAGE NUT                             | 16       |
| M8 NUT CAP                              | 56       |



Lay out all parts provided on a table or flat surface, to ensure that all required parts are accounted for,

# Installation Instructions

The table below shows the Front Filler parts and fasteners for the **TOYOTA HILUX 2026 \*CONTOUR CANOPY ONLY**

| Front Filler* & Fasteners               | Quantity |
|-----------------------------------------|----------|
| RHS FILLER w/ 2 x M6 RIVNUT             | 1        |
| LHS FILLER w/ 2 x M6 RIVNUT             | 1        |
| TOP DEFLECTOR                           | 1        |
| FRONT FILLER PINCHWELD                  | 1        |
| SPONGE RUBBER 3x20mm 1160mm             | 1        |
| M6X16 B/HD BOLT S/S                     | 4        |
| M8X16 B/HD BOLT S/S                     | 4        |
| M6X18MM OVERSIZED WASHER S/S - DIN 9021 | 4        |
| M8X20MM OVERSIZED WASHER S/S - DIN 9021 | 4        |
| M8 HALF HEX NUT                         | 4        |
| M6 SPRING WASHER S/S                    | 4        |
| M8 SPRING WASHER S/S                    | 4        |




Lay out all parts provided on a table or flat surface, to ensure that all required parts are accounted for,

# Installation Instructions

**STEP**  
**1**

Unbox the canopy and recycle the packaging material. Identify the mounting kit brackets and corresponding fasteners as illustrated below.

The TH26 Mounting Bracket A is used on the top-front of the mounting kit only, with the TH26 Mounting Bracket C being utilized for the LHS and RHS top-sides. The middle bottom utilizes TH26 Mounting Bracket B, with dedicated front and rear brackets for the LHS and RHS shown on the next page.

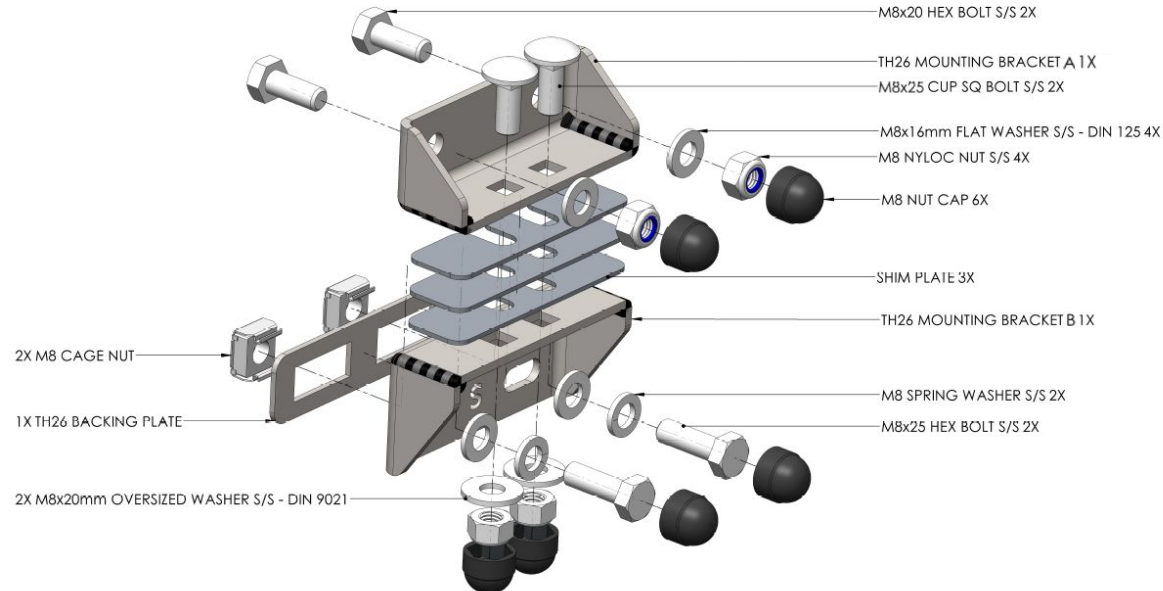


# Installation Instructions

STEP  
1.1


Illustrated below are the TH26 Mounting Bracket Front LHS, and TH26 Mounting Bracket Rear LHS.

Ensure that the correct bracket is fitted at the correct designation, as they are unique in orientation.

TH26 Mounting Bracket Front LHS

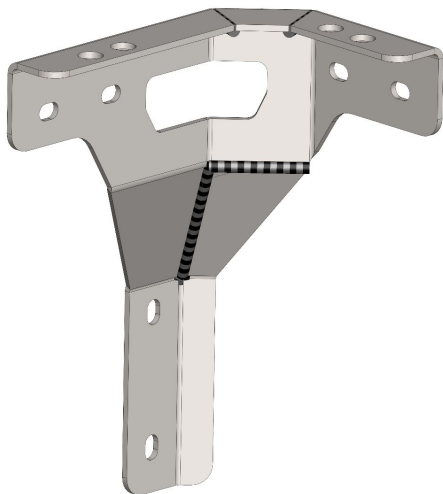

TH26 Mounting Bracket Rear LHS

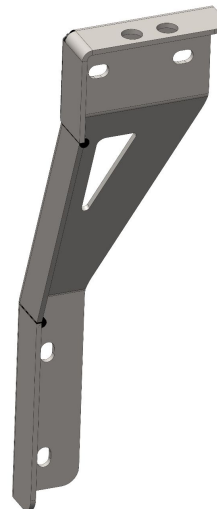

# Installation Instructions



## STEP 2

Install the lower TH26 Mounting Brackets Front LHS/RHS, TH26 Mounting Bracket S and Rear LHS/RHS into the corresponding mounting points in the Load Bin. In the Front and Rear positions, the OEM M8 Hex Nuts must be removed in the Loadbin, for the corresponding brackets to be fitted. Reinstall the M8 OEM Bolts, or make use of the M8x25 Hex Bolts if the mounting hook is to be retained with the installation.

The XC variation requires drilling into the loadbin, to secure the bracket shown below. Whereas the DC variation only requires two holes to be drilled. Any bare metal should be treated with rust-prevention measures. 8mm Drill bit is used for the M8 Fasteners, and 11mm Drill bit for the M8 Rivnuts.

Make use of 2 x M8x25 Hex Bolts, 2 x M8 spring Washer, 2 x M8 Washers and 2 x M8 Cage nuts in the below shown illustration, to secure the TH26 Mounting Brackets to the Load Bin:

The TH26 Backing Plate with 2 x M8 Cage Nuts is inserted behind the Load Bin wall, and the corresponding Mounting Bracket fastened from the front. Mounting Bracket B is shown below as an example:

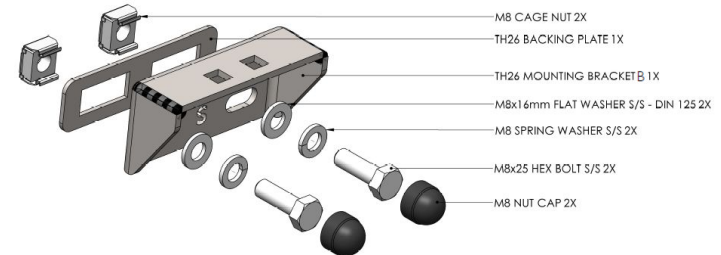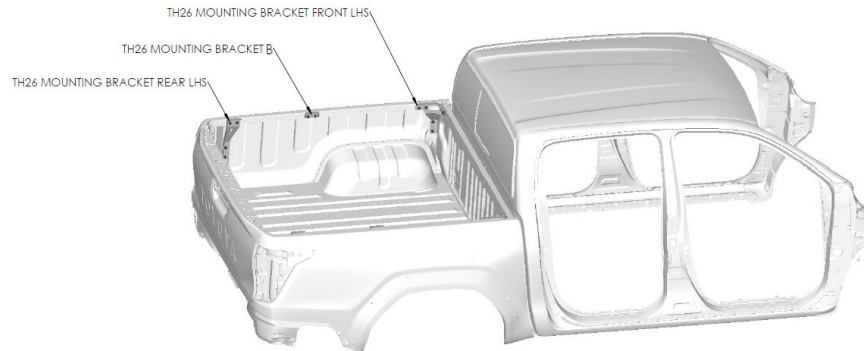





# Installation Instructions

**STEP**  
**2.1**

Make use of 6 x M8x25 Hex Bolts, 6 x M8 spring Washer, 6 x M8 Washers and 4 x M8 Cage nuts in the below shown illustration, to secure the TH26 Mounting Brackets to the Load Bin. \*Rivnuts are only applicable to the XC variation.

The TH26 Backing Plate with 2 x M8 Cage Nuts is inserted behind the Load Bin wall, and the corresponding Mounting Bracket fastened from the front. Mounting Bracket Front LHS and Mounting Bracket Rear LHS is shown below as an example:

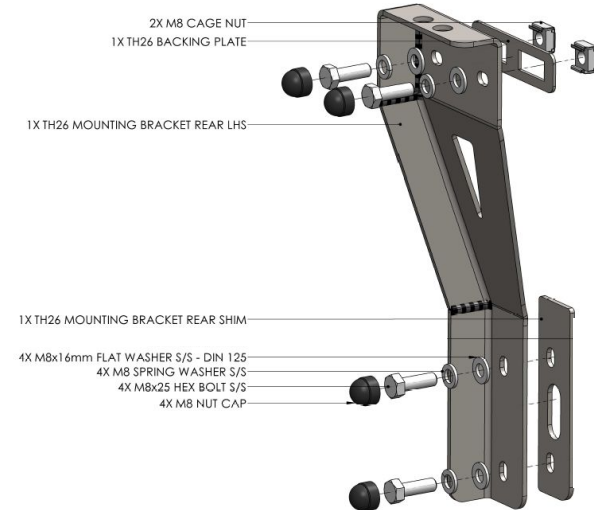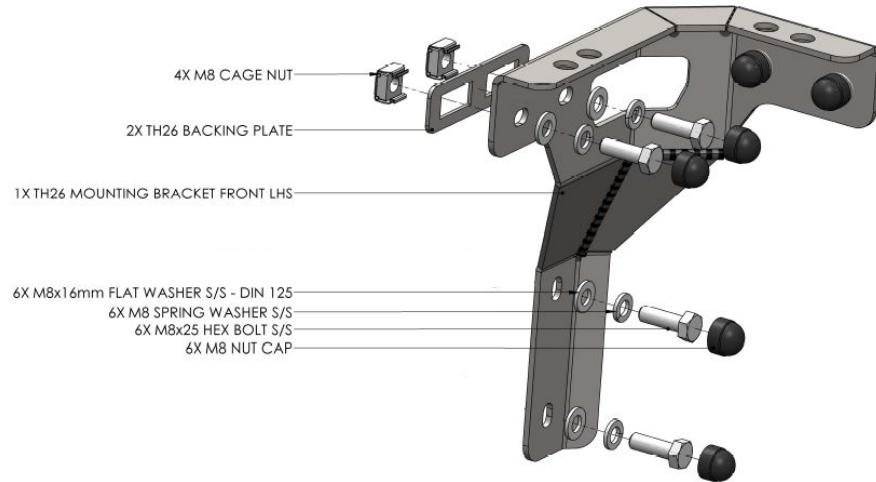


# Installation Instructions

STEP  
3

Install the upper TH26 Mounting Brackets A into the corresponding mounting points in the front of the Canopy bottom frame.  
Install the upper TH26 Mounting Brackets C into the corresponding mounting points in the LHS and RHS side of the Canopy bottom frame.

Make use of 2 x M8x20 Hex Bolts, 2 x M8 Washers and 2 x M8 Nyloc nuts in the below shown illustration, to secure the TH26 Mounting Brackets to the Canopy bottom frame. Do not fully tighten M8 Nyloc Nuts, to allow free movement of the brackets.


Align the TH26 Mounting Bracket A and TH26 Mounting Bracket C's position with the brackets installed into the Load Bin in the previous Step 2.

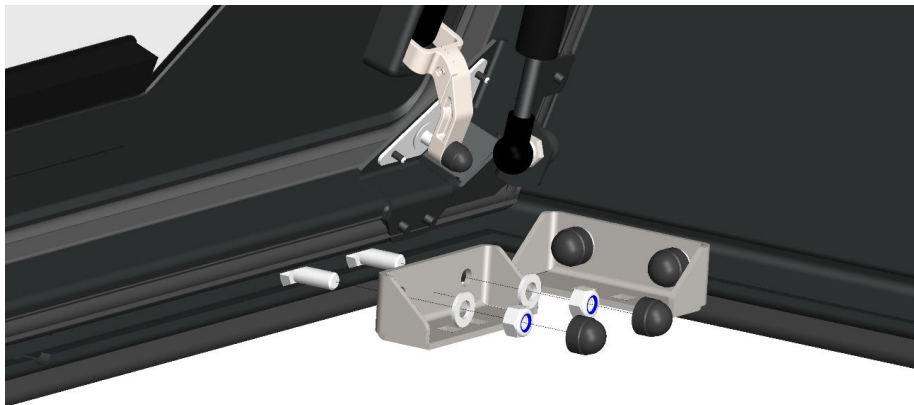

# Installation Instructions

STEP  
3.1

Shown below is the dimensional spacing of the Extra Cab mounting brackets, relative to the Canopy.

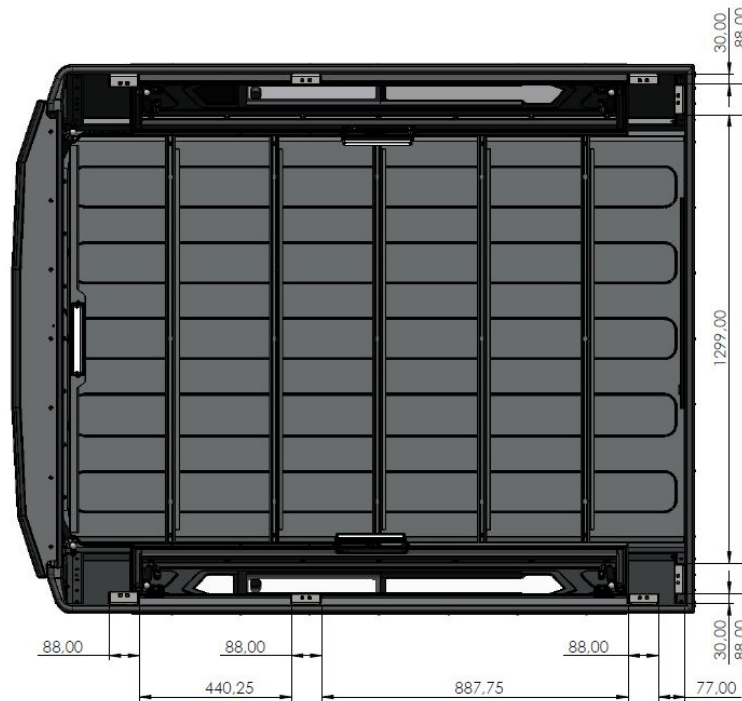

# Installation Instructions

## STEP 4

Install 2 x M8 Half Nuts into the side nutslot as shown below. Secure the Side Filler with 2 x M8x16 Button Head Bolts, 2 x M8 Spring Washers and 2 x M8 Washers. Repeat the same steps for the other side filler Do not tighten the bolts until the top deflector has been installed.

Install the top deflector front the top, and secure it with 2 x M6x16 Button Head bolts, 2 x M6 Spring Washers and 2 x M6 Washers on each side. Ensure the back face of the top deflector is pushed all the way back against the front of the Canopy.

Proceed to tighten all the bolts once the side fillers have been adjusted to position. Torque M6 bolts to 10 N.m and M8 Bolts to 14 N.m

Install the pinchweld around the front leading edge of the front filler as illustrated below:




# Installation Instructions

STEP  
5


Position the Canopy on the Load Bin, ensuring the the Canopy's bottom frame is flush with the inside of the Load Bin. Align the top mounting brackets with the corresponding bottom mounting brackets.

The weight of the Canopy should rest on the mounting brackets, while maintaining an adequate seal between the Load Bin.

FRONT ALIGNMENT

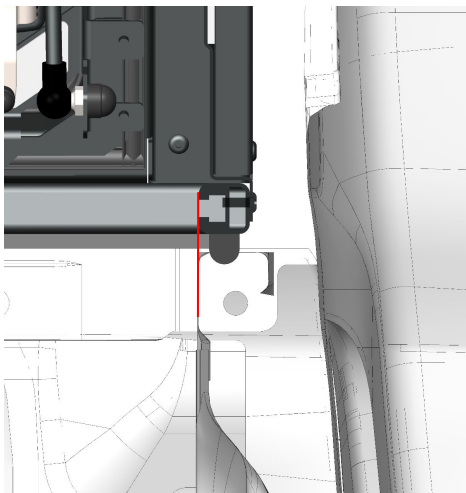

SIDE ALIGNMENT

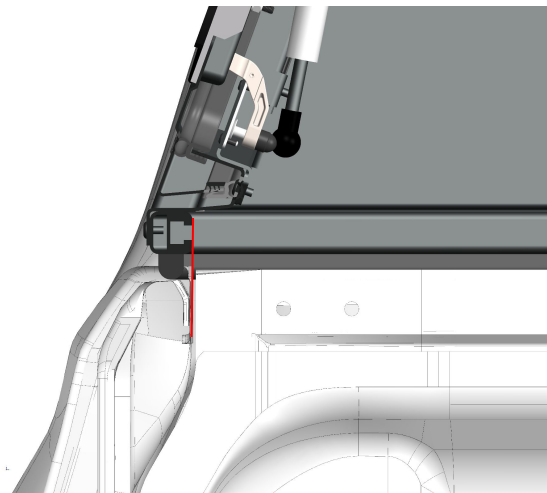


# Installation Instructions

STEP  
6

Fasten the top mount bracket to the bottom mount bracket, making use of 1 x M8x25 Cup Square Bolt, 1 x M8 Washer and 1 x M8 Nyloc Nut. Establish whether it is necessary to make use of Shim Plates, by evaluating if the weight of the Canopy is resting on the Load Bin, or on the brackets. If the top mount bracket buds up against the bottom mount bracket, the weight is support by the brackets. If there is a gap between the top and bottom mount brackets, it will be necessary to make use of the Shim Plates. Ensure that the bottom Canopy frame seal still provides an adequate seal between the Load bin and the Canopy.

Ensure the top mount bracket is aligned with the bottom mount bracket, before **tightening all bolts to torque specification of 22N.m.**

Install M8 Nut Caps on all exposed nuts and bolt heads as illustrated below:

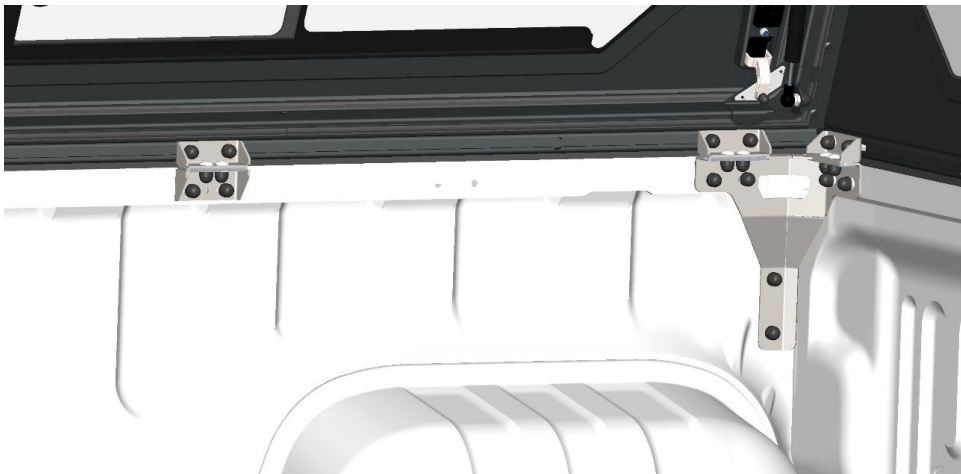

# Installation Instructions

STEP  
7

Identify the Electrical Wiring Loom in the rear left corner of the Canopy. Connect it to the corresponding 12V, 5A auxiliary power supply. The loom is fitted with a TOYOTA 90980-12A21 MALE/FEMALE CONNECTOR, that connects into the cabin, and draws power from the vehicle. Route the loom into the load bin cavity in the rear left corner, secure it along the chassis and into the cabin to the appropriate location.

**Red is the live wire, where Black is the negative wire.**

The Push Lock Keys are located in the rear left corner of the Canopy. Open all the doors to ensure that there is no obstruction and that the doors open freely and as intended.

The Canopy installation is now complete.



# DISCLAIMER

---



All rights reserved. No part of this website may be reproduced, translated, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of the owner.

## **Review all instructions information carefully before installation.**

Any damages, direct or incidental to the installer and/or property due to incorrect installation of any parts are the responsibility of the installer. Due to the various applications and fitment options available, the responsibility lies with the user to ensure all mounting points are secure and tight before every trip.

If unsure, consult with your Distributor regarding the operations of our products.

Users are advised to be mindful of the load they are carrying and drive in accordance with road conditions.

## **WARNING**

Always wear appropriate PPE (Personal protection equipment) when fitting our products. Although the mounting kit is designed to be DIY, if you have any doubts or concerns, contact an accredited fitment centre to carry out the work. Alu-Cab will not be liable for any injury to persons, and/or damage to products and/or vehicles.

While Alu-Cab Holdings takes reasonable measures to ensure that the contents of this Website are accurate and complete, Alu-Cab Holdings makes no representations or warranties, whether express or implied, as to the quality, timeliness, operation, integrity, availability or functionality of this Website or as to the accuracy, completeness or reliability of any information on this Website. Alu-Cab Holdings reserves the right to make changes, corrections and/or improvements to the information and to the products and programs described in such information, at any time without notice.

Alu-Cab Holdings will use reasonable endeavours to maintain the availability of the Website, except during scheduled maintenance periods, and reserves the right to discontinue providing the Website or the service or any part thereof with or without notice to you. Any person who accesses this Website or relies on this Website or on the information contained in this Website does so at his or her own risk.

Occasionally, at our discretion, we may include or offer third-party products or services on our website. These third-party sites have separate and independent privacy policies. We therefore have no responsibility or liability for the content and activities of these linked sites. Nonetheless, we seek to protect the integrity of our site and welcome any feedback about these sites.