

Alu-CabTM

MAKE IT BETTER

FITMENT INSTRUCTIONS

Canopy Camper KITCHEN CUPBOARD ADAPTER

DISCLAIMER

Preliminary information

All rights reserved. No part of this document may be reproduced, translated, stored in a retrieval system. Or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of the owner.

Review all instruction information carefully before installation.

Any damages, direct or indirect to the installer and/or property due to incorrect installation of any parts are the responsibility of the installer.

Due to the various application and fitment options available, the responsibility lies with the user to ensure all mounting points are secure and tight before every trip. If unsure, consult with your Distributor regarding the operations of our products.

Users are advised to be mindful of the load they are carrying and drive in accordance with road conditions.

Alu-Cab recommends that all sealing work is allowed to cure for 24 hours, after which you may drive the vehicle on normal paved roads. Before driving off-road with your Alu-Cab product or operating your roof conversion, an additional cure period of 48 hours is required.

Failure to follow these instructions will void your warranty. Please ensure that you follow the sealant manufacturers curing time as per their technical data sheet.

These times may differ slightly from the times we have recommended.



Service Enquiries email
queries@alu-cab.com

Installation Instructions


1.1

Tools & Items Required

13mm Ring Spanner/Socket Ratchet

10mm Ring Spanner/Socket Ratchet

8mm Ring Spanner/Socket Ratchet

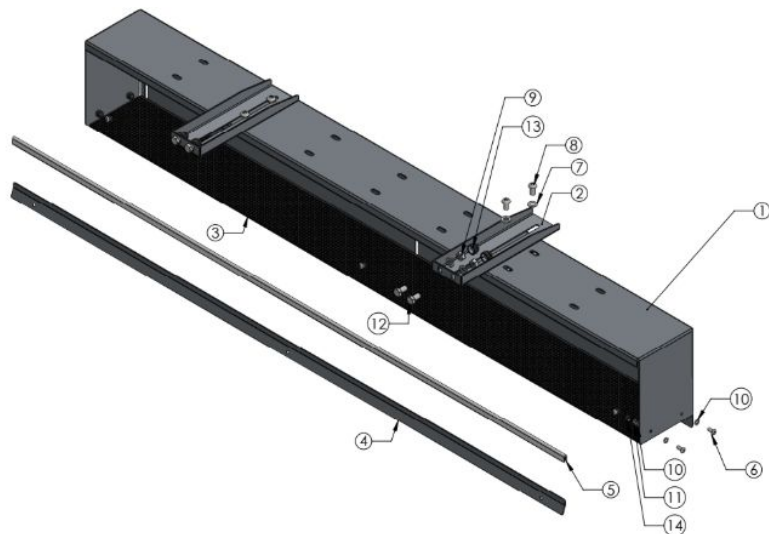

1.2


Fasteners Supplied

ITEM NO.	PART NUMBER	DESCRIPTION	Default/ QTY.
1	CC2-A-BO-CUPB-ADP-A01	KITCHEN CUPBOARD ADAPTER PANEL ASSEMBLY	1
2	CC2-A-BO-CUPB-ADP-P002	KITCHEN CUPBOARD ADAPTER TOP MOUNTING BRACKET	2
3	CC2-A-BO-CUPB-ADP-PYR-R (118 x 1250)	RUBBER - PYRAMID / DIAMOND	1
4	CC2-A-BO-CUPB-ADP-P003	KITCHEN CUPBOARD ADAPTER FRONT STRIP	1
5	CC2-A-BO-CUPB-ADP-RUB-P (1250mm)	PINCHWELD RUBBER - 1250mm	1
6	BHD-M5x12	M5x12 B/HD Bolt S/S	7
7	FW-M8	M8x16mm FLAT WASHER S/S - DIN 125	12
8	BHD-M8x16	M8x16 B/HD BOLT S/S	4
9	NY-M8	M8 NYLOC NUT S/S	8
10	FW-M5	M5x10mm FLAT WASHER S/S - DIN 125	11
11	NY-M5	M5 NYLOC NUT S/S	7
12	HEX-M8x16	M8x16 HEX BOLT S/S	4
13	NCAP-M8	NUT CAP-08mm	8
14	NCAP-M5	NUT CAP-05mm	7



NB: Use anti-seize lubricant or paste when installing stainless hardware.

Installation Instructions

All sheet metal parts powder coated.


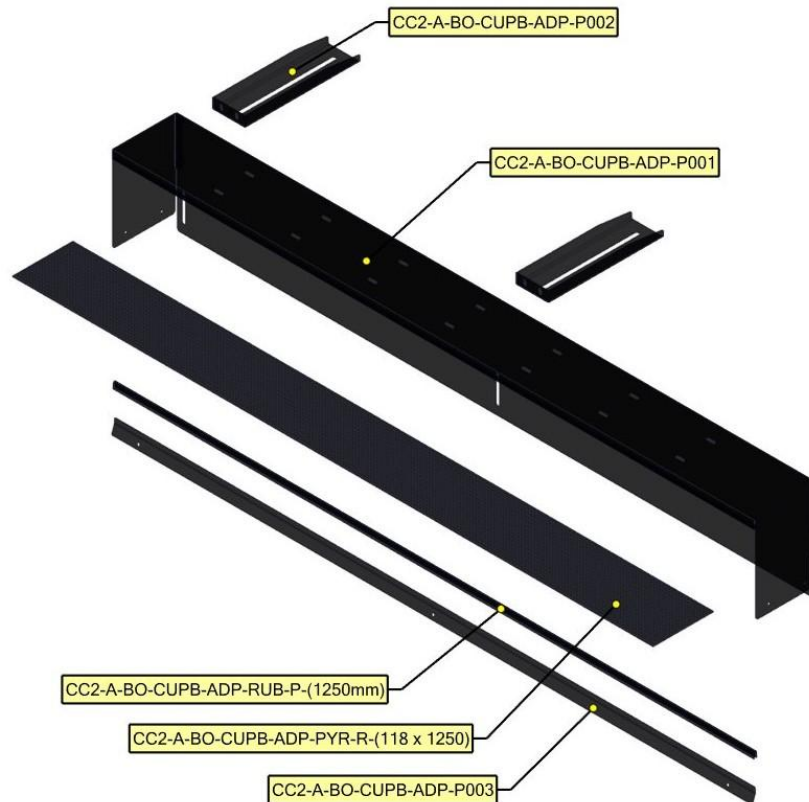


Installation Instructions

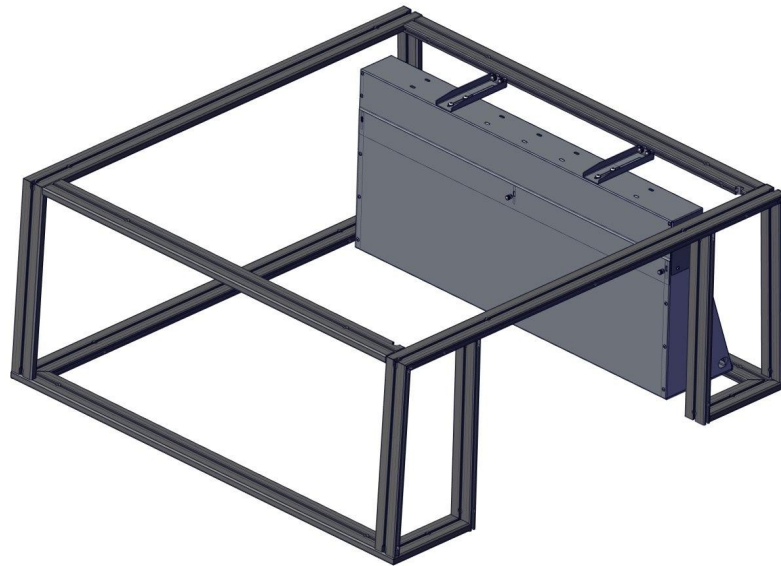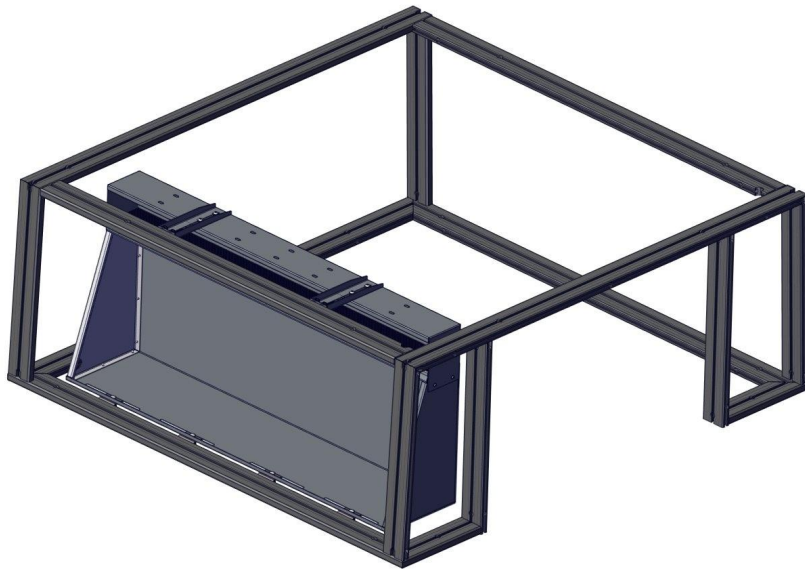


Installation Instructions

Assemble the adapter kit to existing kitchen cupboard using specified fasteners. Top: M8x16 / Sides: M5x12 / Back: M6x16.
Keep all bolts slightly loosen to allow adapter kit top mounting brackets to slide into nut slot position.

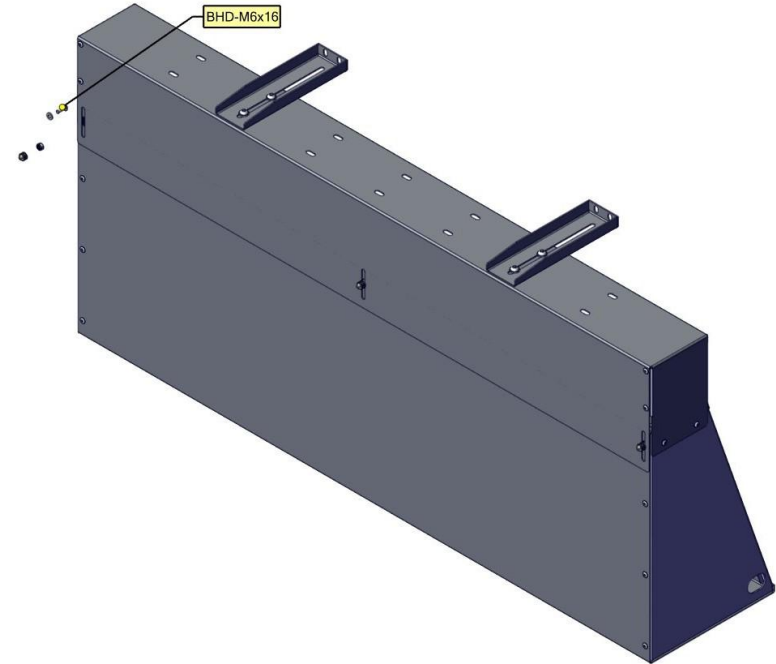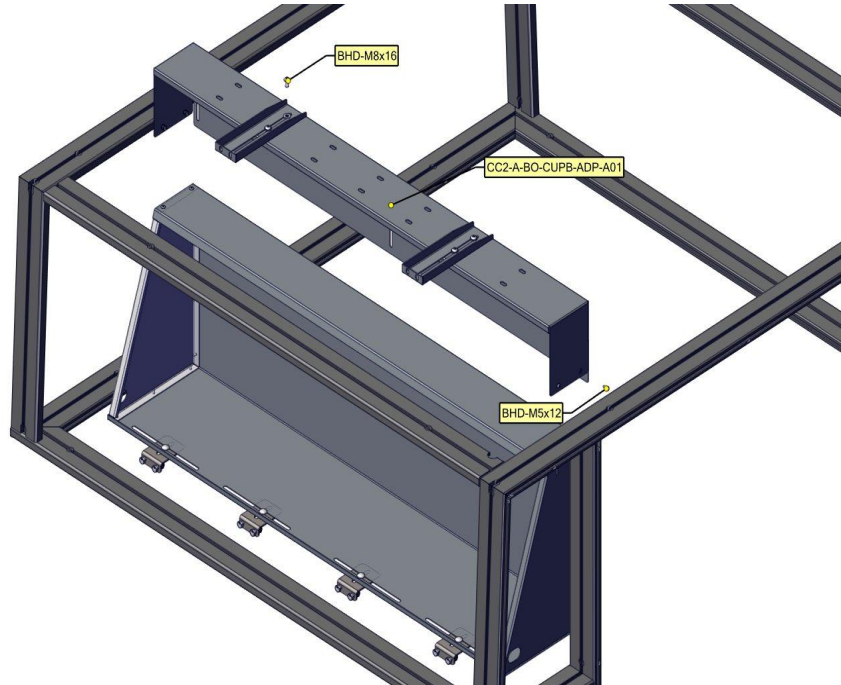


Installation Instructions

Slide 4 off M8x16 Hex Bolts into Nut Slot. Slide ADAPTER TOP MOUNTING BRACKET into position and tighten up HEX-M8x16 and the rest of the bolts.

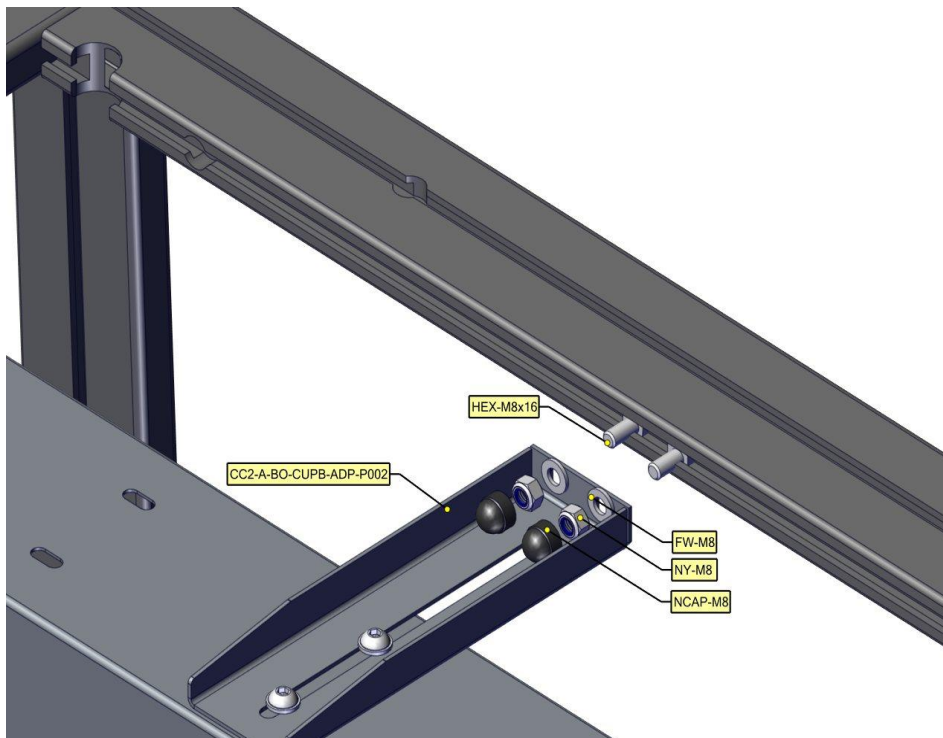

Assembled Camper Cupboard

When all the bolts is tightened up, align the ADAPTER FRONT STRIP to the cupboard and drill 3 x 5,2Ø holes for mounting the strip. Place PINCHWELD RUBBER - 1250mm and RUBBER - PYRAMID / DIAMOND as shown below.

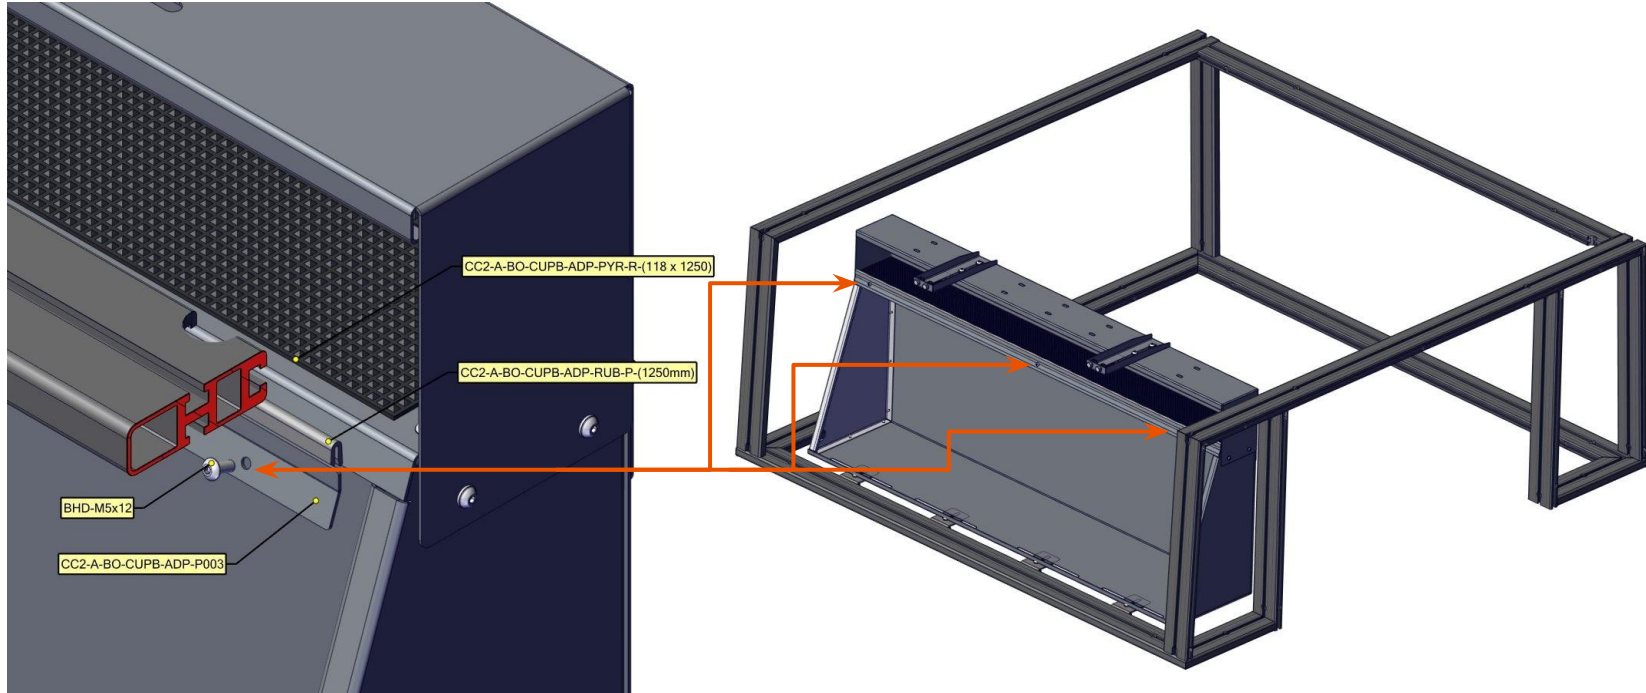

Assembled Camper Cupboard



Photo of Canopy Camper cupboard fitted into canopy.

END